

Portable Eye Wash Instruction

Hebei Runwangda Making Clean Materials Co., LTD

Portable press-wash skin & eye wash WJH0782A

***Usage:**

Portable press-wash skin & eye wash is not only the essential equipment of labor protection, but also the essential protective facilities against poisonous and corrosive material. It can be used in the field of the chemical industry, semi-conductor, metallurgy, electron and machine, also can be used in outdoor.

***Feature:**

Portable press-wash skin & eye wash takes up little room, which is the most visible character. The feature of it:

It can supply the most professional protection, convenient & shortcut.

It has no special requirements of installation. it can be used according to circumstances.

It can be used in washing face or eyes, hands assistant is available if necessary.

it's made of innocuous polyethylene, equipping with exhaust valve.

***Method of Usage:**

Input water: turn the inflator pump counter-clock wisely, take it out and add pure water to the scale of 12L. Then tighten the lock nut.

Air inflation: rotate the inflator pump handle and pull it out of the constant head tank, push and pull it to inflate to the Vent Valve exhausting automatically. Then pull the handle into the constant head tank.

Rinse: the eye wash is usable when clenching the eye wash handle, draw down the push button to fixing the water at a constant stream, after using, draw up the push button & loosen the handle.

***Attentions:**

1. This article has no drain hole, pls arrange the water outlet beforehand.
2. If acid or alkaline solution harm eyes, pls repeatedly rinse them by eyewash, then use the eye wash or do medical assistance.
3. Regular air inflation check is needed per 3 days or change the water per 5-7 days.
4. If used in work places or dangerous environments, it is better to add some professional eyewash concentrated liquor so as to protect the eyes or face from damage, and to keep the liquor for a long time.

***Maintenance:**(enclosed with spare parts for changing)

- 1.If air leakage happens in flator pump ① turn the inflator pump clock wisely to make sure it fix fast. ② turn the inflator pump counter-clock wisely, take it out to examine if the gasket of the inflator pump is of transformation, if be, pls change it.
- 2.Airinflation is unable: ① loosen the lock nut, take out the inflator pump core to examine if the gasket of the inflator pump is of transformation, if be, pls change it. ② turn the inflator pump counter-clock wisely, take it out to examine if the joint between gasket & inflator pump is tight, if be, please change it.

***Scheme of Installation**

